




An example of the Free-oil Recovery *Tactic*. Actual deployment should be adjusted for local conditions.

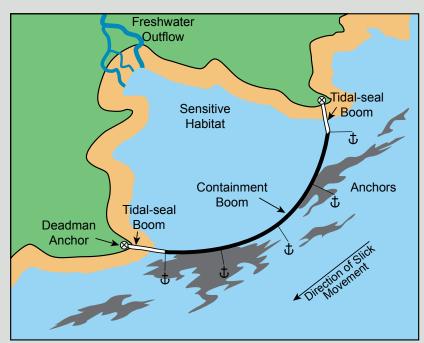

An example of the **Exclusion Booming** *Tactic*. Actual deployment should be adjusted for local conditions.

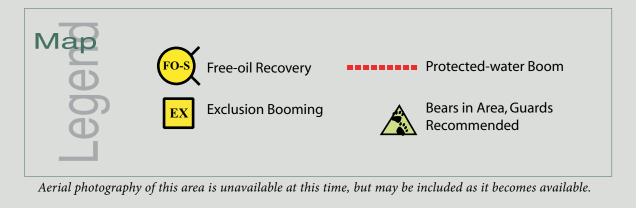

Castle River, SE03-13

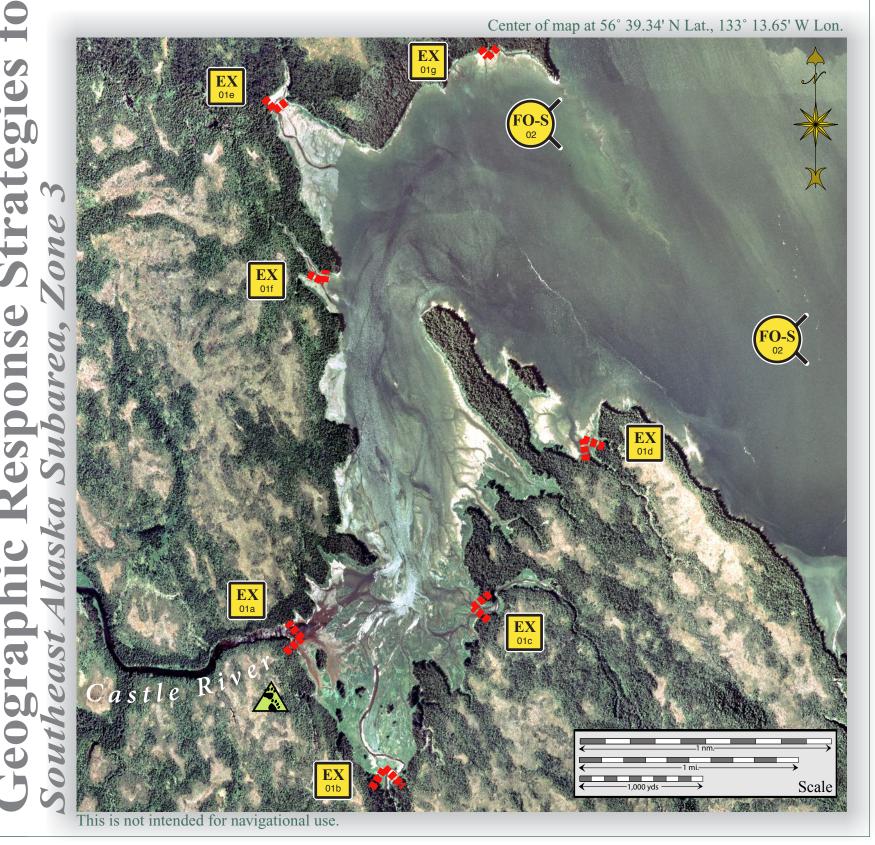

(1)

1 •

1

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected	Special Considerations
SE03-13-01 EX	Castle River Area Castle River a. Lat. 56° 38.34'N Lon. 133°15.19'W Middle River b. Lat. 56° 38.04'N Lon. 133°14.55'W c. Lat. 56° 38.37'N Lon. 133°14.15'W d. Lat. 56° 39.05'N Lon. 133°13.32'W e. Lat. 56° 40.09'N Lon. 133°15.36'W f. Lat. 56° 39.62'N Lon. 133°15.24'W g. Lat. 56° 40.61'N Lon. 133°14.45'W	Exclude oil from impacting the streams and intertidal areas near the Castle River.	Deploy anchors and boom with skiffs (class 6). Place protected-water boom in a chevron pattern in front of the entrance to designated creeks/rivers. Tend throughout the tide. Boom Lengths: a. 450 ft. b. 250 ft. c. 300 ft. d. 350 ft. e. 400 ft. f. 300 ft. g. 200 ft.	Equipment Equipment 2250 ft. protected-water boom 11 ea. anchor systems 28 ea. anchor stakes Vessels 1 ea. class 3 2 ea. class 6 Personnel/Shift 7 ea. vessel crew Tending Vessels 1 ea. class 3 1 ea. class 3 1 ea. class 6 Personnel/Shift 3 ea. vessel crew	Vessel Platform	Via marine waters Chart 17360	Fish: chum,psockeye, coho, Pink Birds: waterfowl concentration Habitat: sheltered rocky shore, gravel beach, sheltered tidal flats, marsh Human Uses: high recreational use, subsistence, commercial fishing, sport fishing	Vessel master should have local knowledge. Bear are present in the area. Bear guards required. Survey: not yet Tested: not yet
SE03-13-02	Castle River Area Nearshore waters in the general area of: Lat. 56° 39.59'N Lon. 133°12.57'W	Free-oil Recovery Maximize free-oil recovery in the offshore & nearshore environment of Castle River depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of Castle River area. Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	Wrangell- 25nm	Via marine waters Chart 17360	Same as SE03-13-01	Vessel master should have local knowledge. Use extreme caution, shoal waters with numerous reefs and rocks, shallow mud flats and channels.